


STEEL FIREBACK INSTALLATION

1. Place the fireback plate snug against the rear wall of the fireplace.



2. Install the L brackets. (if they are not supplied, you may need to fabricate the brackets out of some thick steel material found in the van)

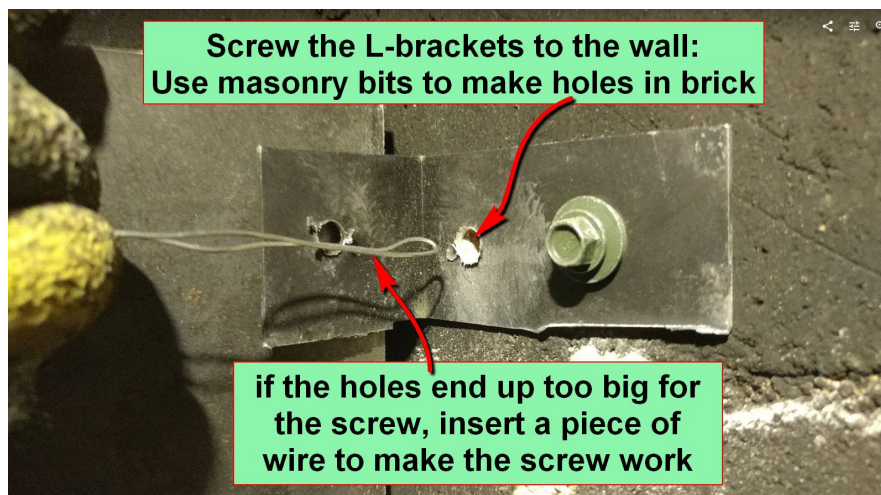

Pre-drill the Steel plate, then apply **5'16"** head, sheet metal self tapping screws

